

100% Safe Visual Standard



Mandatory – Must be applied at all locations


General Floor Cleaning

Brooms must only be utilised for clearing debris, **not dust**. When brooms are used, water suppression must be implemented and operatives must wear self checking RPE which has been correctly face fitted.

Dust will become airborne when swept. If dust or debris must be cleared then a vacuum cleaner with an 'H' or 'M' class filtration must be used. **General vacuums are not effective in collecting dust.**

Golden Rules for dust and debris management on site:

- Maintain good housekeeping standards to reduce build up of dust and debris
- Use on tool extraction to reduce the need for cleaning up.
- Always opt for a vacuum for clearing of dust and debris
- Brooms to be used as last resort with additional controls - dampening down, face fit tested self checking RPE

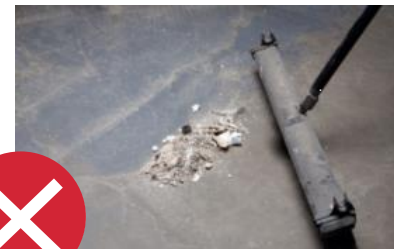

Pat Boyle

Pat Boyle
Managing Director
Construction

REFERENCE	REVISION	DATE	OWNER
SHE-VIS-031	Rev 2	May 2022	M. Hall

**MORGAN
SINDALL**
CONSTRUCTION